

7

Before installing, check the bar is in the correct orientation.

VERTICAL

for


Left / Anti-Clockwise Operation



HORIZONTAL

for

Right / Clockwise Operation

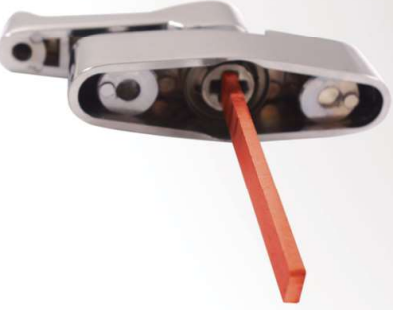

8

While holding the sash lock in place, locate and fit the external faceplate in place and tighten the two screws. Do not overtighten screws as this may result in stiff operation. Ensure a good and reliable fit by utilising plastic packers and button pads (various sizes supplied). Finally, fit the supplied plastic screw cover caps to finish.



SASHSTOP

<https://sashstop.co.uk>

Contact Us

Safehome Ltd, Meredith Building 01482 753283

31-33 Reform Street

Hull, HU2 8EF

United Kingdom



info@sashstop.co.uk

We reserve the right to amend specifications without prior notice.
© Safehome Ltd 2019. rev01-2019.

SASHSTOP


INSTALLATION GUIDE

1

Make sure there is room for the SASHSTOP before drilling




Use a square to measure the centerline of the door/window hinge.

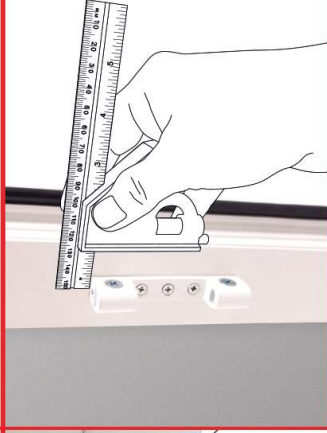

This will usually indicate where manufacturers screw in hardware to their frames.

2

Mark the centerline on the side where the SASHSTOP is being installed, using the measurement from Step 1.

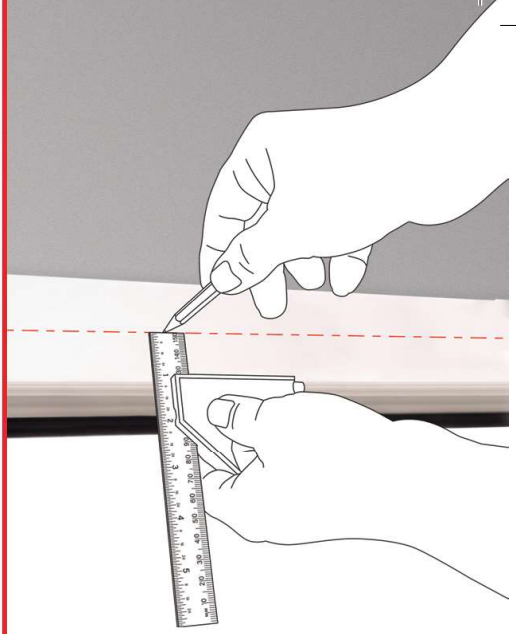

3

Mount the installation jig, lining up the guide holes with the centerline. Drill three holes on both sides using the guides.



5

Widen the holes on each side to the measurements shown



Drill 10mm completely through centre hole for flat bar spindle

4

You should now have three holes on both the external (a) and internal (b) sides of the door sash.



6

Unpack the Assembly Kit and Lock.
Note: Use 3mm Locknut with Shallow Face Plate.



Assembly Instructions

- Insert **1** Cam Lock into **2** Faceplate
- Screw on the **3** 3mm Nut
- Apply the **4** Adapter
- Insert the **5** Grub Screw

